

Interactive harp seal

# PARO

Therapeutic Robot

MCR-900

MCR-A888

User Manual

How to take care of PARO



◆ We would like to thank you for purchasing PARO.

**CAUTION-ELECTRIC TOY :** PARO is not recommended for children under 8 years of age. As with all electric products, care should be exercised during handling and use to prevent electric shock.

**ATTENTION:**

**JOUET ELECTRIQUE**

Non recommandé pour les enfants moins de 8 ans d'âge.

Comme avec tous les produits électriques, les précautions devraient être remarquées pendant la manipulation et l'utilisation pour éviter le décharge électrique.



**Warning**

Since PARO is an electric toy, care must be exercised to prevent fire or personal injury while using PARO.

In this manual, we will provide you with important information for safely using and caring for PARO.

Read the User Manual carefully and follow its instructions while operating PARO. Be sure to save the User Manual for future

## Functional explanations

---

### PARO uses electricity

---

#### ◆ Feeding PARO

Real harp seals eat fish, but PARO needs electricity to operate.

If PARO's batteries are not charged enough to operate, PARO will stop moving.

When the charge in the battery is low, PARO will move to show you it is hungry.

When this happens, you can charge PARO by using the AC adaptor.

As well, when PARO is left alone for some time while it is on, will stop moving.

PARO will rest in order to conserve the charge in its battery.

When PARO is resting, you can make it move again by touching its back or providing some other form of stimulation.

Turn off PARO's switch when you are not using PARO.

The switch is located between PARO's hind flippers. (Refer to page 17.)

#### ◆ How long can PARO keep moving?

The length of time the battery can support physical movement is about 5 hours, although the exact time depends on the amount of interaction with PARO.

#### ◆ When PARO gets hungry

##### (The battery is losing charge)

When the battery loses most of its charge, PARO will call out twice to express its need to have its batteries recharged.

When the batteries are completely discharged, PARO will turn off automatically.

#### ◆ You can use PARO even if its batteries are not charged.

When the battery is fully discharged you can still use PARO at any time by plugging in the AC adaptor. When you use PARO with the AC adaptor plugged in, PARO will not get hungry.

In that case PARO can work continuously.

However, turn the switch off and let PARO have a rest when you are not interacting with PARO.

#### Notice


When you are leaving PARO alone for a long period of time, make sure the AC adaptor is unplugged.

---

## How to charge PARO

---

- ① Turn PARO off.
- ② Plug the AC adaptor into the wall.  
The POWER lamp will go on.
- ③ Pull off the safety-cap on the jack and place it into the receptacle inside PARO's mouth.  
When the CHARGE light is on, PARO is being charged.  
When the CHARGE light goes off, PARO is completely charged.

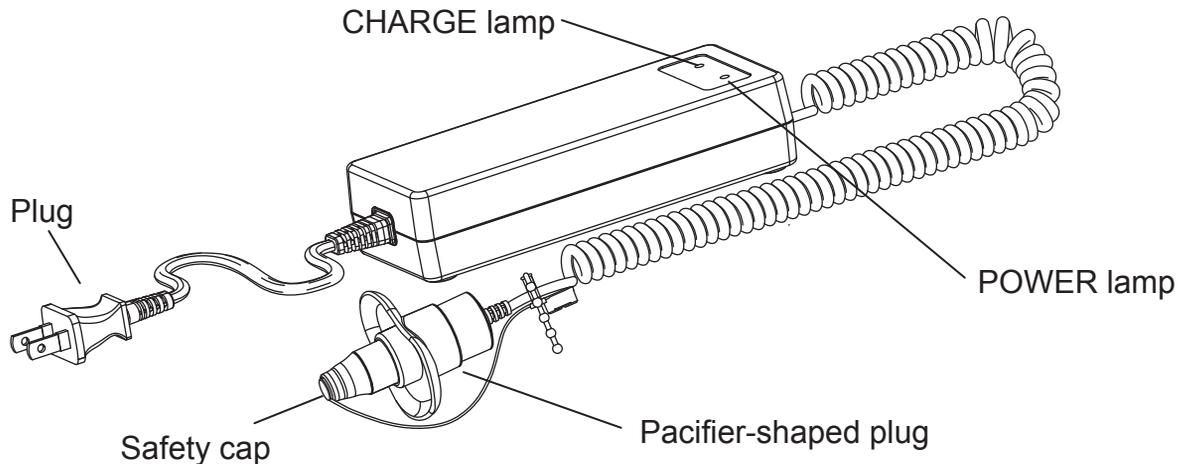

## Charging instructions

---

- When the battery pack gets hot due to extended use of PARO, the battery will not charge. This is done to protect the battery pack from overheating.
- The CHARGE light may go off, even when charging has not been completed. If this happens, try unplugging the pacifier jack from PARO's mouth and then plug it in again. Charging should then resume until it is completed.
- When PARO is operating with the AC adaptor plugged in, PARO will not charge. Charging only occurs when PARO is turned off.
- When PARO is plugged into the AC adaptor, it will not recharge so long as PARO is working. PARO works by getting electric power through the AC adaptor. Even when the batteries are not charging, the CHARGE light will illuminate.
  - ※ It blinks on and off according to PARO's movement. It is not because of a failure.
- Discharge PARO's battery completely before you recharge PARO.
- It takes about 3 hours to charge the battery from empty to full.

---

## How to let PARO operate and rest (switch ON, switch OFF)

---

### ◆How to make PARO operate.

- Turn PARO on by pressing the on/off switch for 1 second.
- If PARO does not move when the switch is turned on, pet PARO on its back and PARO will wake up.

### ◆How to let PARO rest.

- Press the switch for 3 seconds.  
PARO will move into a sleeping position and call in a quiet voice, signifying it will stop operating, and go to sleep.

---

## Place of serial number (manufacturing number)

---

Place where the serial number was stamped.

- Fancy box (box on which the photo of PARO is printed) side surfaces.
  - Please refer to the diagram on the right side.
- PARO main body ••• Please refer to p. 27,28.

There is one serial number for each PARO;  
you will need this serial number when you wish to get support.

※When we receive requests for support,  
this number will be used for owner referral,  
so please check the number before  
making any request for support.



Fancy box  
(box on which the photo of PARO is printed)  
Side surfaces place where  
the serial number was stamped.



---

## PARO's stomach / underside

---

① Volume control switch

The volume of PARO's voice is adjustable:

press the 'Up' switch to make it louder and the 'Down' switch to make it softer.

Whenever you press a volume control switch, PARO will call with the adjusted volume.

② Battery pack housing base

※ For installing and removing the battery pack, please refer to p.29,30.

③ Location of marked serial number

It is a production number for each PARO and necessary when you have any services.

This number is marked on the fancy box other than PARO's abdomen area.

①~③ are covered by a lid.

Please open the lid when you need to see the serial number.

Initialization of the memory:

You can reset PARO's memory to the factory default at any time by pressing the 'Up' and 'Down' volume control buttons at the same time for about 3 seconds.

The reset is complete after two 'bleep' sounds.

**Notice**

If you reformat the memory, everything PARO has already learned will be completely erased.

---

### Changing the battery (Replacement instructions)

---

The battery pack inside PARO will last about 2 year.

The capacity of the battery to hold a charge will gradually decrease over time.

We recommend that you replace the battery pack after using it for 2 year.


**1. Turn PARO off by pressing the on/off switch between PARO's hind flippers.**

Wait until PARO stops moving.


※If the AC adaptor is plugged in, unplug it.

**2. Turn over PARO's body , open the fastener and open the battery lid.**


To open the battery compartment lid, press the plastic hook and pull the lid off.

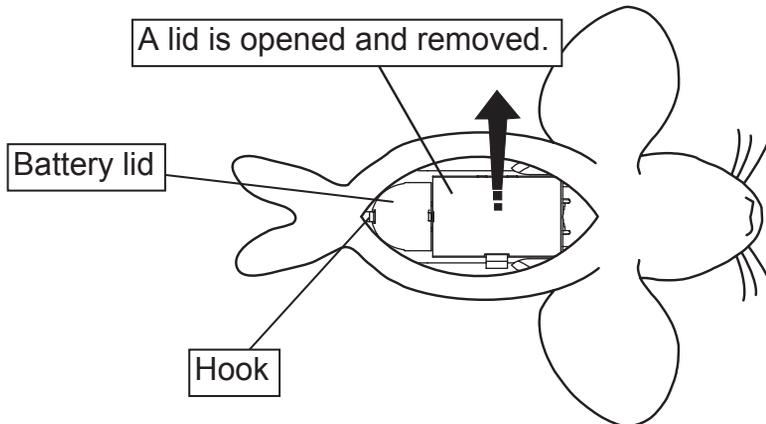

- 3. Please detach the battery pack by sliding it and attach a new battery pack.**  
Please attach it firmly so that it clicks.

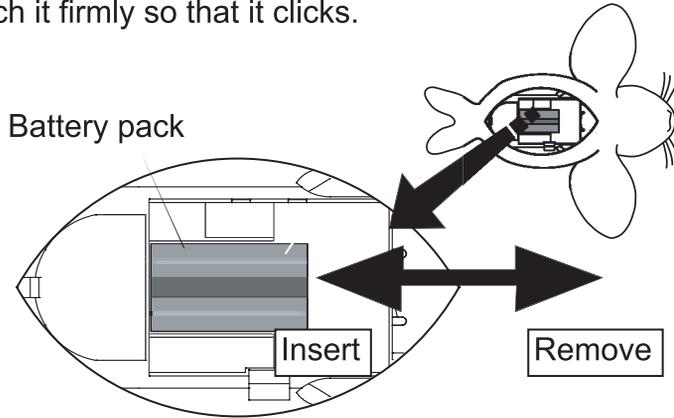

- 4. Please close the battery lid, close the fastener and put it on the floor as in the illustration below.**  
Insert the battery lid so that it clicks.

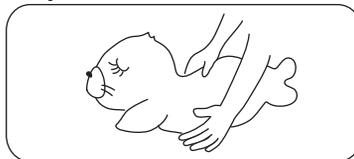

**Notice**

When you hold PARO, make sure to hold PARO by the body (torso).

## **Additional information for safe operation of PARO**

In order to safely use PARO and prevent damage to PARO and the AC adaptor, you should follow these guidelines:

### **◆ How to use PARO**

- Do not use PARO in places where it may be dropped or shaken, or on unstable surfaces.
- Do not touch or squeeze PARO too hard, such as leaning on it with your elbow.
- Do not hit or drop PARO, as it will cause damage.
- The power may turn off following a strong impact or when the unit is dropped.  
Please press the power button again to restart.
- Do not hold PARO up, twirl or twist it by its head or flippers.
- Do not leave PARO in hot places, such as in bright sunlight or in a closed car.
- Do not put foreign materials in PARO's mouth.
- Do not use PARO outdoors where it could be exposed to water or other foreign materials that could damage PARO.
- Do not put PARO in water.
- Do not put stickers on PARO's nose or eyes.
- Do not interfere with or restrict PARO's movements in any way.
- Do not disassemble or modify PARO.
- When you transport PARO, place it in a shock absorbing container, such as the box it was delivered in, so that you do not damage PARO's head, body, or flippers.
- Do not put PARO in a microwave oven or X-ray machine.
- When you use PARO, make sure your hands are clean.  
The artificial fur may otherwise get dirty and will be difficult to clean.

### **◆ Condensation on PARO**

When you move PARO quickly from a low temperature to a high temperature location, the water vapor becomes liquid and condensation occurs.


Do not use PARO when you move it from hot to cold places.

Wait an hour before switching PARO on, as the condensation inside PARO can cause damage.

**Warning**

◆ **How to use the AC adaptor**

- Use only the AC adaptor provided in PARO's box.  
If you use a different AC adaptor, it will not charge PARO and may cause damage or fire.
- Do not separate the AC adaptor into parts or modify it.
- Do not connect the AC adaptor when you are in a foreign country using a AC adaptor.  
It can cause overheating and will damage PARO.
- Never leave the AC adaptor in the following places, even for storage, as it can damage the adaptor.
  - ◇ Places that are hot.
  - ◇ Direct sun light or other heat source.
  - ◇ Places with intense vibration.  
Places with powerful magnetism.  
Sandy or dusty conditions.
- Sand and dust can cause serious damage to PARO.
- Do not drop the AC adaptor.
- Do not use the AC adaptor near TVs or radios, as it may interfere with reception.
- Do not pull the AC adaptor by its cord.

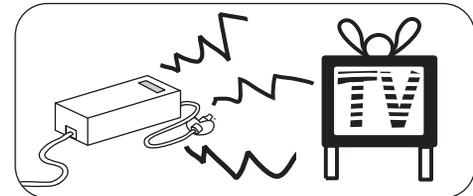

◆ **When you use PARO while it is plugged in, PARO and the AC adaptor will get warmer.**

When you use PARO while it is plugged in, it is normal for PARO and the AC adaptor to get warmer.

◆ **If PARO or the AC adaptor overheat,**  
this may indicate that there is a problem.


Immediately unplug the AC adaptor and remove the battery pack from PARO.

**Warning****◆ How to use the battery pack**

- Do not leave the battery in a place where the temperature exceeds 100°F.
- Be careful not to allow anything to contact the battery terminals.
- When you do not use PARO for a long time, remove the battery pack and store it in a cool place. Recharge the battery pack when you haven't used PARO for a long time.
- Do not drop the battery pack or put heavy articles on it.
- Do not apply strong force to the battery pack.
- Do not put the battery pack into a fire.

**Notice****Maintenance of the AC adaptor**

- If the AC adaptor case is soiled, wipe the casing with a dry soft cloth.  
If the case is still dirty, use a soft cloth lightly moistened with water to wipe the case.  
Dry the case immediately with a soft dry cloth.
- Do not use solvents of any kind as they may damage the AC adaptor.
- Do not leave the case in contact with rubber or vinyl objects for a long period of time, as they may cause the case to deteriorate.

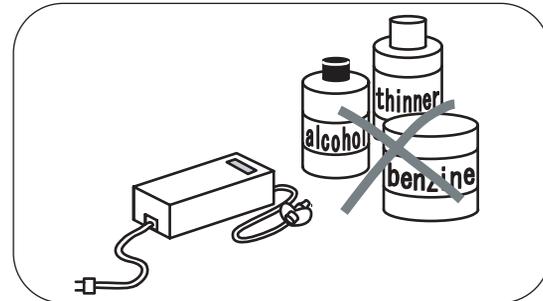


### Cleaning PARO's fur

Basic equipment for PARO robot use and cleaning:

- Dapple toy cleaner®(or comparable product)
- Wire brush
- Hand towels
- PDI Super Sani-Cloth Germicidal Disposable Wipes®(or comparable product)
- Purell alcohol-based hand sanitizer gel (or comparable product)
- Although PARO's artificial fur is made of antibacterial materials, it may get dirty.

• Daily cleaning routine is as follows:

- 1.Spray PARO's fur with Dapple cleanser
- 2.Gently wipe clean PARO's fur with towel, avoid area around eyes and nose
- 3.Wipe down PARO's fur with PDI Super Sani-Cloth wipe.
- 4.Let PARO's fur dry as much as possible
- 5.Brush the entirety of PARO's fur (brush in the direction of the fur)
- 6.Clean the brush

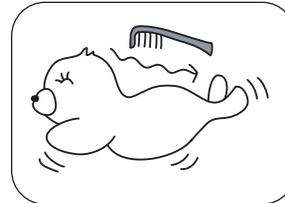

## Troubleshooting

---

If you think PARO is not operating properly, please check the following table.

If PARO does not work at all, it may be damaged. Please contact PARO Robots U.S., Inc.

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
◆ You pressed the on/off switch for 1 second and PARO did not turn on.	Battery is not charged. AC adaptor is not inserted correctly (when using PARO with AC adaptor plugged in).	Charge the battery (refer to page 24, 25). Plug in the AC adaptor correctly and press the on/off switch again.
◆ Even after charging, PARO does not work.	The on/off switch may not be in the ON position.	Press the on/off switch between PARO's hind flippers for 1 second. (Refer to page 17.)
◆ Front and hind flippers do not move.	There may be interference with PARO's movements, such as a thick pile rug or carpet.	Put PARO on another surface.
◆ PARO does not call out.	Volume may be too low.	Adjust the volume (Refer to page 27).
◆ PARO does not operate shortly after unplugging the AC adaptor, even though the battery appears to be fully charged.	On occasion, the battery will not fully charge to prevent the battery from overheating. If this occurs, charge the battery again according to the charging directions. (Refer to page 24, 25.) If the battery is fully charged and PARO stops working soon after being unplugged from the AC adaptor, replace the battery pack.	

If you notice any abnormality in PARO or its accessories, such as those described below, it is an indication that using them further may be dangerous. Look at the table below to diagnose the problem and find a solution.

Please also consult PARO Robots U.S., Inc.

Problem	Solution
◆ Damage to the electrical cord. The rubber casing of the electrical cord is damaged.	The cord is no longer protected and there is a risk of shock. Unplug the cord from the wall socket immediately.
◆ The AC adaptor is wet.	There is a risk of electric shock if you continue to use the AC adaptor. Unplug the AC adaptor from the wall socket immediately.
◆ PARO or one of its accessories stopped working after they were dropped or pressed too firmly.	PARO may turn off due to a sharp impact. In this case, please turn it on again. If it still does not move, the base plate may be out of position or there may be a fault with an internal part. To avoid possible injury, please DO NOT attempt to dismantle PARO yourself. Return PARO to PARO Robots U.S., Inc. Do not attempt to disassemble PARO or its accessories, as there is a risk of electric shock and personal injury.
◆ Water is poured on PARO.	Water can cause an electric shock if moisture gets into PARO. If water gets into PARO, immediately turn PARO off and remove the battery pack.

If you notice any abnormality in PARO or its accessories, such as those described below, it is an indication that using them further may be dangerous. Look at the table below to diagnose the problem and find a solution.

Please also consult PARO Robots U.S., Inc.

Problem	Solution
◆ Damage to the electrical cord. The rubber casing of the electrical cord is damaged.	The cord is no longer protected and there is a risk of shock. Unplug the cord from the wall socket immediately.
◆ The AC adaptor is wet.	There is a risk of electric shock if you continue to use the AC adaptor. Unplug the AC adaptor from the wall socket immediately.
◆ PARO or one of its accessories stopped working after they were dropped or pressed too firmly.	PARO may turn off due to a sharp impact. In this case, please turn it on again. If it still does not move, the base plate may be out of position or there may be a fault with an internal part. To avoid possible injury, please DO NOT attempt to dismantle PARO yourself. Return PARO to PARO Robots U.S., Inc. Do not attempt to disassemble PARO or its accessories, as there is a risk of electric shock and personal injury.
◆ Water is poured on PARO.	Water can cause an electric shock if moisture gets into PARO. If water gets into PARO, immediately turn PARO off and remove the battery pack.

If you notice any abnormality in PARO or its accessories, such as those described below, it is an indication that using them further may be dangerous. Look at the table below to diagnose the problem and find a solution.

Please also consult PARO Robots U.S., Inc.

Problem	Solution
◆ Abnormal sounds.	※ This may occur when PARO's joints are damaged or have moved out of place. Turn PARO off and immediately remove the battery pack. Continued use of PARO could cause the problem to worsen.
◆ Abnormal smells, or there is smoke coming out of PARO.	A short circuit may have occurred in the electrical circuit board or mechanical parts. This can cause a fire or electric shock if you continue to operate PARO. Immediately switch PARO off and remove the battery pack.
◆ PARO heats up more than usual.	Some damage has occurred. Stop using PARO.

## Frequently Asked Questions

---

Question	Answer
◆ What should we do if PARO will not open its eyes and we cannot force them to open manually?	Do not try to open PARO's eyes manually. When PARO is resting, PARO closes its eyes. PARO should wake up when you pet it. If PARO does not wake up even after you have petted it, press the on/off switch to turn it off, and then turn PARO back on. If PARO still does not respond, there may be internal damage to PARO.
◆ After PARO has developed a character, can that character be changed?	You can change PARO's character by changing its environment and stimulus. Even if PARO has developed a character, it will continue to develop in response to its environment.
◆ PARO gets angry easily. How can I calm PARO down?	Pet PARO gently and softly and call its name. Your gentle attitude will calm PARO down.
◆ PARO tends to stop moving. Is this a problem?	PARO will go to sleep if it receives no stimulus, just like a real seal would. Pet PARO softly to wake it up. (When PARO is operating while plugged into its pacifier and AC adaptor, PARO will not go to sleep.)
◆ PARO does not respond when I call its name. Is it upset?	PARO has some difficulty hearing long and complicated names. Please choose a short and clear name for PARO. PARO cannot hear voices when there is a lot of ambient noise. Call PARO's name in a quiet environment.

Answers to frequently asked questions.

Question	Answer
◆ PARO's joints are noisy and its movements are jerky when it is moving around.	When a strong force is applied to its joints, PARO may move noisily or choppily to prevent the joints from being damaged. It is not actually damaged.
◆ PARO's artificial fur is dirty. Can we wash PARO?	No, PARO cannot be washed. Wipe PARO with a soft cloth. If there is any dirt that you cannot remove, you can send PARO in for its artificial fur to be replaced for a charge.

## Technical specifications

---

### PARO

CPU	32bitRISC Processor
Joints	Eye (eyelids), Head, Front flippers, Hind flippers
Fur	Antibacterial (top layer)
Hearing	Microphone
Vocalization	Speaker
Internal sensor	Tactile sensor (located in head, chin, torso (top, belly), front and hind flipper) Whiskers, Light sensor, Position sensor, Temperature sensor
Electric power	about 9W
Operation time	about 5 hours (when the battery is fully charged)
Size	about 350 x 160 x 570mm (1325/32 x 69/32 x 227/16 inches) (width * height * length)
Weight	about 2.55kg (including the battery pack) (5.62lb)
Operation temperature	41°F ~ 95°F
Operation humidity	40% ~ 85%
Storing temperature	-4°F ~ 140°F
Storing humidity	10% ~ 90% (except for condensation and ice)

## AC adaptor

Input	AC120V 60Hz 25W
Output	DC 18V, 1.1A
Operation temperature	32°F ~ 95°F
Operation humidity	20% ~ 90%
Storing temperature	-4°F ~ 167°F
Storing humidity	20% ~ 90% (except for condensation and ice)
Size (without the cord)	around 60 x 35 x 160mm (23/8 x 13/16 x 69/32 inches) (width * height * length)
Weight	around 0.7kg (1.54lb)
Length of the cord	DC cord about 2.0m (783/4 inches) Electrical cord about 2.0m (783/4 inches)

## Lithium-ion battery pack

Battery	Lithium ion
Voltage	7.4V DC
Capacity	2600mAh
Operation temperature	32°F ~ 104°F
Operation humidity	65% ± 20%
Storing temperature	-4°F ~ 68°F (for one year)
Storing humidity	65% ± 20% (for one year)
Size	about 40 x 23 x 70 mm (25/16 × 29/32 × 11/4 inches) (width * height * length)
Weight	about 120g (0.26lb)

The specifications and appearance of this product may be modified without notification to the user. We apologize for any inconvenience this may cause.

# Index

---

## A

AC adaptor ..... 9 ~ 11  
24 , 32 , 41  
Autonomous robot .... 15

## B

Battery pack ..... 12 ~ 14  
29 , 30  
33 , 42  
Battery storage  
compartment ..... 27 , 28

## C

CHARGE lamp ..... 24  
Charging ..... 24 , 25

## F

Feeding ..... 23  
Feeling ..... 22

## H

Harp seal ..... 15  
Hearing ..... 22

## L

Lithium-ion  
battery pack ... 42

## M

Motion ..... 22

## O

On/Off switch .... 17

## P

PARO ..... 40  
Position ..... 22  
POWER lamp ..... 24

## R

Recognizing light .... 22  
Recycling ..... 14

## T

Temperature ..... 22

## V

Vocalization ..... 22  
Volume ..... 27 , 28